




1

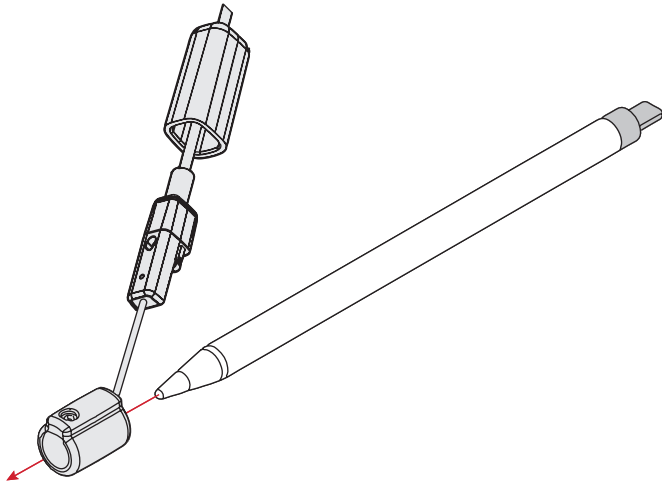


2

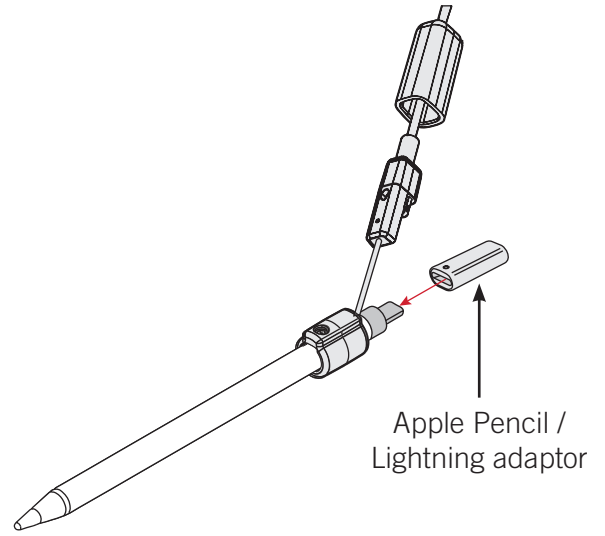


3

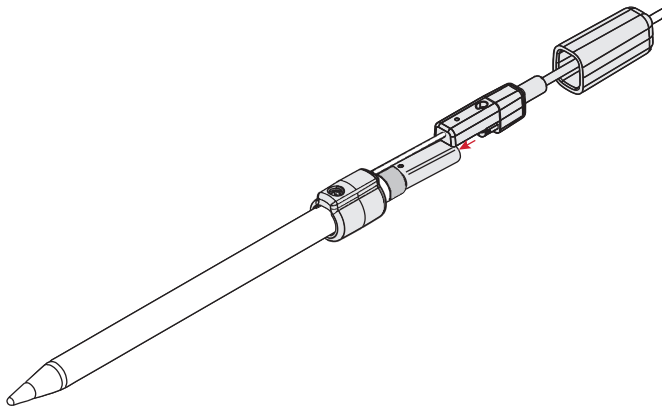

4

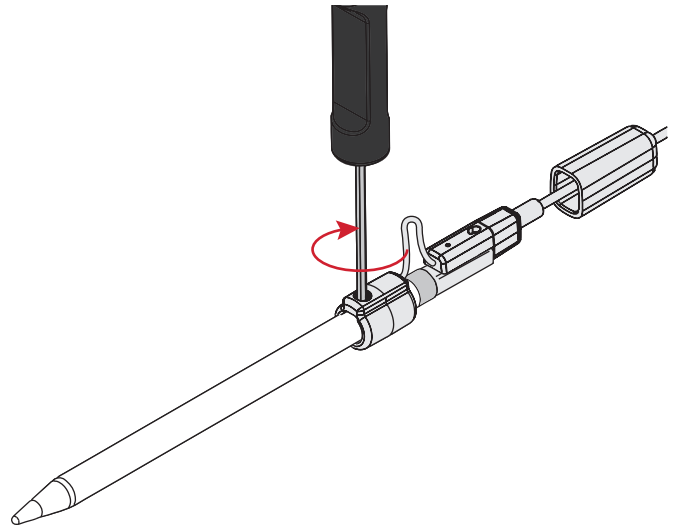


5

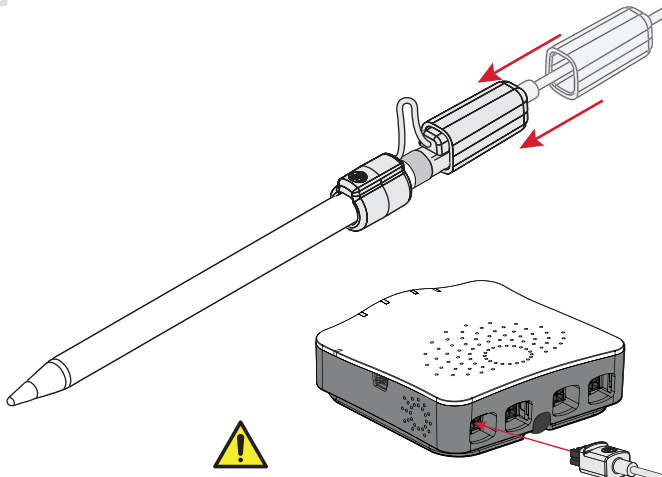

Refer to the Core II Product Manual for further system operation and arming.

LED Indicators

Solid LED:
Armed & Not Charging

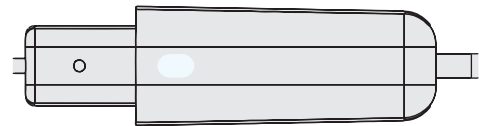

Blinking LED:
Armed & Charging



No LED:
Disarmed & Not Charging

